


WIO 4 FRG00035-X	<b>W05</b>
Fitting WiO Sensor	

**Notes:**

1. Use a new sealing when replacing the sensor.
2. For sensor installation in the inlet pressure line a  $\frac{3}{4}$ " thread socket is needed.
3. Note: Max. torque moment for tighten the sensor part is 40Nm.
4. Please do not use rude pliers for the installation of the sensor – see drawing below. Only use the hexagon part above the  $\frac{3}{4}$ " thread with a 30mm wrench for installation.

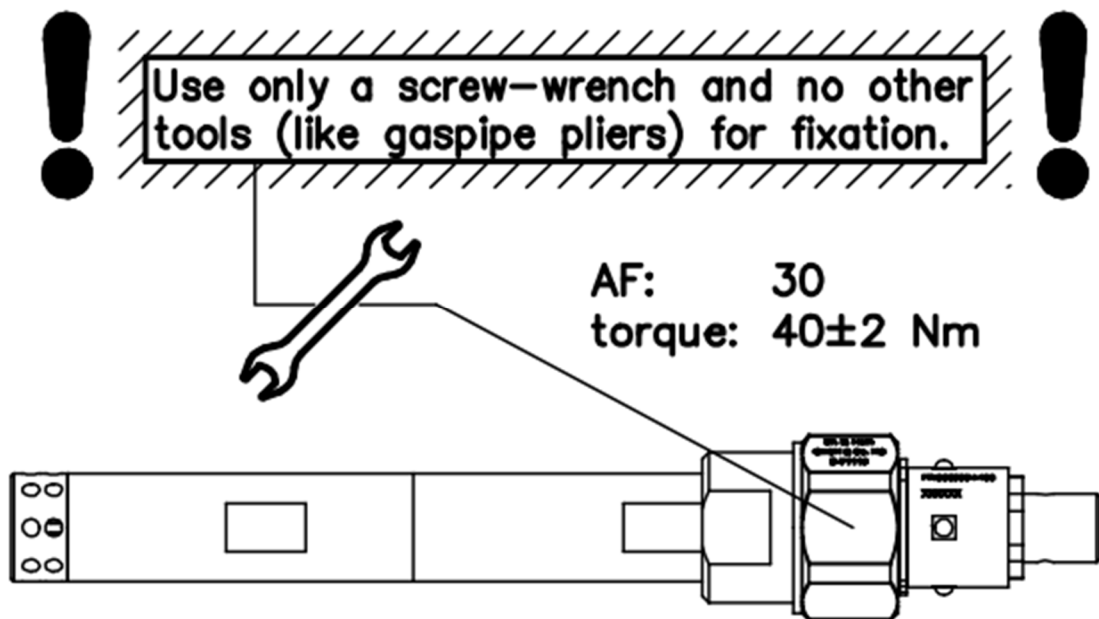

Examples:



Figure 1: Seal types

There are different seals,  
rubber and steel with rubber.  
Or both steel/rubber

In combination with a threaded socket



Figure 2: arrangement

Fix the smaller rubber seal (or steel/rubber) in  
the screw connection.

and tighten with max 40 Nm,  
spanner sizes 23mm and 30mm first.



Figure 3: sealing

Then place the larger steel/rubber seal  
on the nut.

In addition, it has proven useful to seal the  
lower thread with Teflon tape or  
a suitable fluid thre then the sensor can be  
fitted ad sealant.

Like e.g. Loctite 545 or similar,

then the sensor can be fitted

